

RMR-DLS-X595

Advanced Micro Technology Design / 360 Degree
Safety / Radar Laser Detector / Laser Scrambler



Owner's Manual
ROCKY MOUNTAIN RADAR

1. Introduction

Dear Rocky Mountain Radar Owner,

Congratulations on your purchase of one of the world's most sophisticated radar/laser detectors. The RMR-DLS-X595 is a completely integrated radar/laser detector which responds not only to all the radar guns in use today, including "Stalker", but also to the other latest development in speed monitoring devices- the laser gun.

This unit scrambles all police laser speed measurement devices and operates automatically.

This model provides distinct visual and audible alerts to warn you of the presence of X, K, and all kinds of Ka Band radar guns in the front and rear of you. This model also provides the benefit of 'undetectability' by alerting you to the presence of VG-2 ('The Radar Detector detector').

It also incorporates a new safety feature - Safety Alert(SA) and Safety Warning System(SWS). This safety feature warns you of the presence of potential road hazards by detecting signals from safety radar transmitting devices.

Note :

Important : The RMR-DLS-X595 is not designed to help you disobey the law. A defensive driver always obeys the posted speed limit and legal driving methods.


Federal and Local Regulations

The FCC passed the Communications Act in 1934 to give all citizens the right to receive all types of radio transmissions. The same radio frequencies used by police radar are also used by other devices, such as automatic door openers, burglar alarms, and some amateur radio equipment. Since the RMR-DLS-X595 is just a radio receiver tuned to a specific portion of the public radio spectrum, it is protected under this act.


Some local, state, and federal regulations may prohibit the use of this detection device. Please check with authorities regarding the use of this device before operating it.

2. Control and Features


1) Included with your Radar Detector

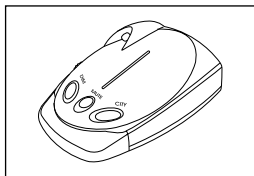


RMR-DLS-X595

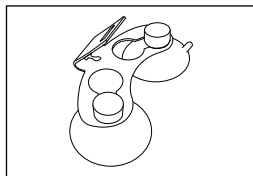


Windshield Bracket with
Suction Cups

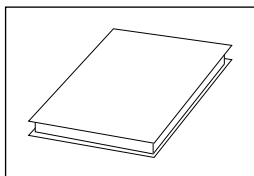


Hook and Loop Fastener Tape

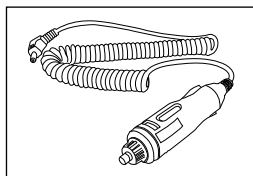

Power Cord

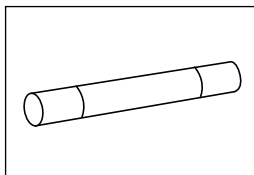




Spare Fuse

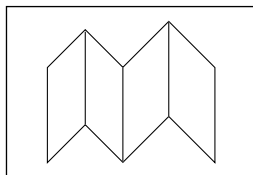

Ticket Rebate

2) Controls and Functions

- a. On/Off Volume Control
- b. Dim Button
- c. Mute Button
- d. City Button
- e. DC 12V Power Input Jack
- f. Radar Antenna
- g. Front Laser Detection Lens
- h. Rear Laser Detection Lens
 - Receives incoming laser signals from rear
- i. Power-On and VG-2 Indicator
- j. X-Band Indicator
- k. K/Ka Band Indicator
- l. City Indicator
- m. LED Signal Strength Meter
- n. Laser Scrambler Indicator
 - Laser Scrambler Indicator is always "ON".

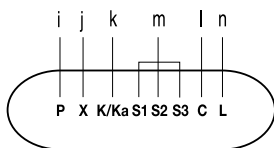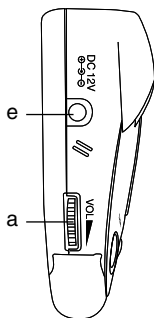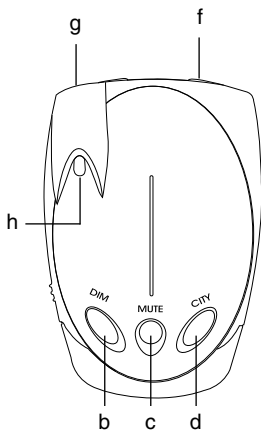

3. Installation

1) Mounting Guidelines

For the best performance, select the proper location for the unit where it has a direct view of the road. The radar antenna is located behind the rear panel of the unit and the laser detection lenses are located behind the rear panel of the unit and the front window. The antenna and sensors should not be obstructed by metal or metallic surfaces and should be pointed at the horizon for accurate long range detection.

- Choose a location that does not block the driver's vision.
- Mount the detector in a level position.
- Do not mount the detector behind metal surfaces, windshield antenna, wiper blades, ornaments, or mirrored glass.
- Heated windshields, currently available as an option on some Ford (Instaclear) or GM(electriclear) vehicles act as an impenetrable barrier to radar signals.
- Do not mount the detector where the driver or passenger might collide in the case of an abrupt halt.

Note : Whichever mounting method you choose, remember to place the radar detector out of view when you leave your vehicle.

This keeps the detector out of sight from thieves and prevents exposure to extremely high temperatures.


Note : If necessary, you may adjust the bracket to the proper angle by bending it. To remove your detector, pull up the detector from the front pulling it towards you.

Caution : On some newer model cars, a plastic safety coating has been applied to the windshield. The suction cups may leave permanent marks on the windshield once they are removed. Check your vehicle owner's manual to see if your car has the plastic safety coating.

2) Mounting Types

A. On Windshield

- a. Attach bracket to windshield.




- b. Bend bracket for correct detection angle.

- c. Plug Power cord into detector.

- d. Attach bracket to detector.


- e. Plug power cord into cigarette lighter.

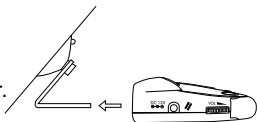

B. On Dashboard


- a. Peel protective paper off one side of hook-loop.

- b. Tape on detector's bottom.

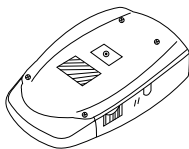

- c. Peel top paper off.

- d. Place detector on dashboard.

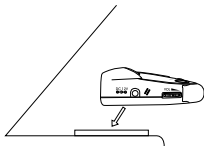

- e. Plug power cord into detector and cigarette lighter.

3) Power Connection


The coiled power cord provided with the unit has a cigarette lighter socket plug at one end and a small connector on the other.

1. Insert the small connector into the jack on the side of the unit.
2. Insert the other end into the cigarette lighter socket of your vehicle.


If the detector does not operate when you turn it on, remove the adapter from the cigarette lighter socket and carefully check the socket for debris. Also, check the fuse in the adapter and your vehicle fuse box.

4) Replacing Fuse

- a. To replace the fuse, unscrew the top of the plug.




- b. Remove and check the fuse to see if it has blown, If it has, replace it.



5) MAIL IN TICKET REBATE REGISTRATION CARD WITHIN 30 DAYS.

4. Operation


1) Power and Volume Control

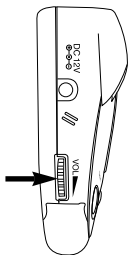

Turn on and adjust volume.

Note : Turning on the detector will trigger the Self-Test mode.

2) Dim Mode

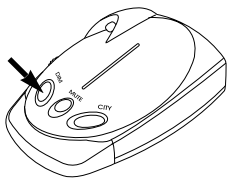


- Press Dim Button.

→ An audible warning sound will alert you that Dim mode has been activated.

Each time you press Dim button, display intensity will change dim, dark, bright.


4. Operation

3) City / Highway Mode

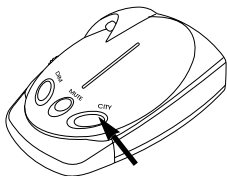

- Press the Button.
→“City” LED turns on for “City” Mode.


4) Mute Mode

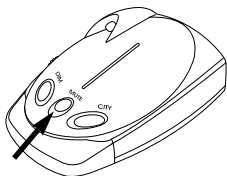

- Press Mute Button.
→Silences the Audio.

Note : Press button again to restore audio alarm.

5) Select Tone

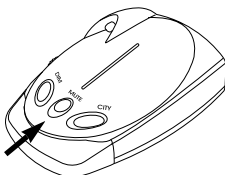


- Hold down the Mute button for three seconds.
The RMR-DLS-X595 will change tone

6) Indicator and Visual


a. Power On

- “P” LED turns on.




b. X-Band Detection

- “X” LED turns on with audible tone.




c. K/Ka Band Detection

- “K/Ka” LED turns on with audible tone.




d. Laser Alarm

- “P” LED and “X, K/Ka, S1, S2, S3” LEDs flash with audible tone.
If the unit detects the laser signal when the City mode is engaged, “P, X, K/Ka, S1, S2, S3, C” LEDs will flash with audible tone.



e. VG-2 Alarm

- “P” LED flashes with audible tone.



7) Feature Memory

The RMR-DLS-X595 will automatically “Remember” your settings when the unit is turned off or removed from the power. All features selected are retained in memory- Dim/Dark, audio tone, City/Highway, VG-2 and Mute.

8) VG-2 Select

- Hold down the City button for three seconds.

The RMR-DLS-X595 will disengage VG-2 feature with beep sound.

- Press City button again for three seconds.

The RMR-DLS-X595 will engage VG-2 feature with three beeps.

- Factory default is “VG-2 On”.
- On start-up the RMR-DLS-X595 will sound the VG-2 alarm when the VG-2 is selected to “On”.

9) Feature Engage Confirmation

Each time a button is pressed two beeps confirm feature “On”, one beep confirms feature “Off”.

ACCESSORIES

Accessories are available as follows:

Windshield mount	\$5.00
Power Cord	\$5.00
Suction cups(set of two)	\$2.00
2amp fuses(two ea.)	\$2.00
Replacement owner's manual	\$3.50

Add \$10.00 shipping and handling per shipment

CAUTION

Tampering with unit

will result in a \$75.00 repair fee!

WE DO NOT ACCEPT COD SHIPMENT

<p>ROCKY MOUNTAIN RADAR 6469 DONIPHAN DRIVE EL PASO, TX 79932 915.587.0307 915.587.6408(FAX)</p>
--

5. Care and Maintenance

Your Rocky Mountain radar detector is an example of superior design and craftsmanship.

The following suggestions will help you care for your detector so you can enjoy it for years.

- Never leave your detector on the windshield or dashboard when your vehicle is left parked. The temperature in the vehicle during the summer can reach levels above what is considered to be safe for this detector.
- To make you less susceptible to break-in and theft, remove the detector from your windshield or dashboard when leaving your vehicle.
- Do not expose the detector to moisture, rain, dew, road splash, or other liquids that can damage the internal components and reduce the sensitivity of the detector.

6. Troubleshooting

If the detector does not turn on:

- Check the power cord. Be sure all power connectors are properly installed.
- Check the fuse that controls the power to the cigarette lighter socket. (See your vehicle's owner's manual for reference.)
- The cigarette lighter socket might be dirty. Clean it with a fine emery cloth to ensure a good, clean connection.
- There might be a problem with the vehicle's electricity.
- Make sure that the volume control is in the ON position.

Caution : Do not place any metal objects other than the cigarette lighter or a cigarette lighter plug in the cigarette lighter socket. Doing so could blow a fuse in your vehicle or cause the metal object to become very hot.

If the detector gives a false alert when the vehicle hits bumps:

- Check the vehicle's electrical system, including main battery cable and alternator connections.
- Install a filter capacitor ($470\mu\text{F}$, 35volts) on the back of the cigarette lighter socket, across the power connection.

If the receiving signal is weak:

- Check the angle of the detector. (Place it on the point of horizon.)
- Radar antenna/laser sensor is obstructed.
(Relocate the detector clear of any obstruction outside the windshield, such as a wiper blade.)
- Relocate the detector clear of the window tint.

7.Specification

RADAR

Receiver Type : Dual conversion Superheterodyne

Antenna Type : Linear polarized, Self-Contained Antenna

Detector Type : Scanning Frequency Discriminator

Frequency of Operation : 10.525GHz/± 50MHz(X-Band)
24.150GHz/± 100MHz(K-Band)

34.700GHz/± 1,300MHz

(Ka Super Wideband)

LASER

Receiver Type : Pulsed Laser Signal Receiver

Detector Type : Digital Signal Processor Pulse
Width Discriminator

Opto Sensor : Dual Convex Condenser Lens and High Speed
Photo Diode Detector

Spectral Response : 800 ~ 1,100nm

GENERAL

Temperature Range : -4 to 158°F (-20 to 70°C)

Power Requirements : 12 ~ 15V DC, 80mA nominal
(Negative Ground)

Dimensions(HWD) 1.1" x 2.5" x 3.6"

Weight : 2.2oz

Specifications are typical : individual units might vary.

Specifications are subject to change without notice.

Warranty

WARRANTY

This unit guaranteed against defects in workmanship and materials for one year. Should you experience any difficulty with the RMR-DLS-X595 during this time, the unit will be repaired or replaced at no charge. Should you desire to have your unit checked, there will be no additional charge other than postage and handling. After the warranty period expires, the unit may be returned for service and it will be reconditioned for \$25.00

Legal : This unit is legal for use in all states and countries that do not ban detectors or Laser Scramblers (not legal in California, Washington, D.C., Utah and Virginia). Detectors are not allowed in commercial vehicles.

Complete Ticket Rebate Registration Card and mail to factory.

FCC Information

This product has been designed and certified to comply with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by Rocky Mountain Radar may void your authority to use this product.



**ROCKY
MOUNTAIN
R▲D▲R**

El Paso, TX.

6469 Doniphan
El Paso, TX 79932
(915)587.0307
fax(915)587.6408